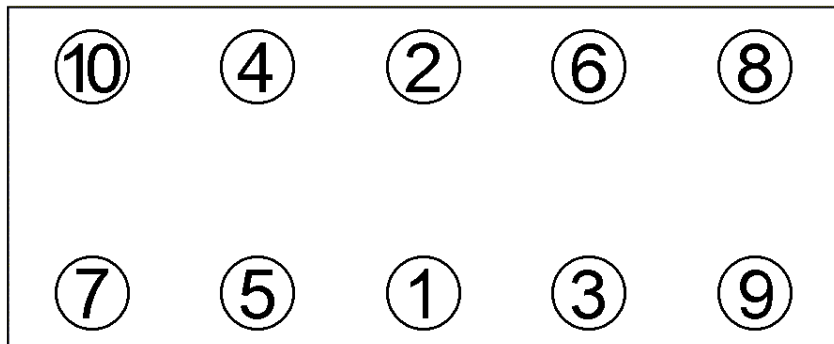


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****285.023**passend für / suitable for  
adaptable à / adaptable a**Audi****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo819.824  
M 12 x 115Anziehen/  
Tightening/  
Serrage/  
Apriete

- ⊙ 40 Nm
- ⊙ 60 Nm
- > 90°
- > 90°
- \* 80°C
- > 90°
- 1.000 km
- > 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

78,5 mm Ø, 1,59/1,50 mm ÷

1,6 Ltr. Diesel, Mot.CR,JK 40 kW (54 PS)

Audi 80 D, 08/1982&gt;07/1989

Audi 4000 (USA)

Audi 90 D, 04/1987&gt;07/1989

1,6 Ltr. Diesel, Mot.CR ab Mot.176 339&gt;, JK

Golf, ab Chassis 17 B 550 001&gt;

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*285.023\***