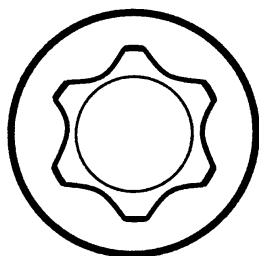
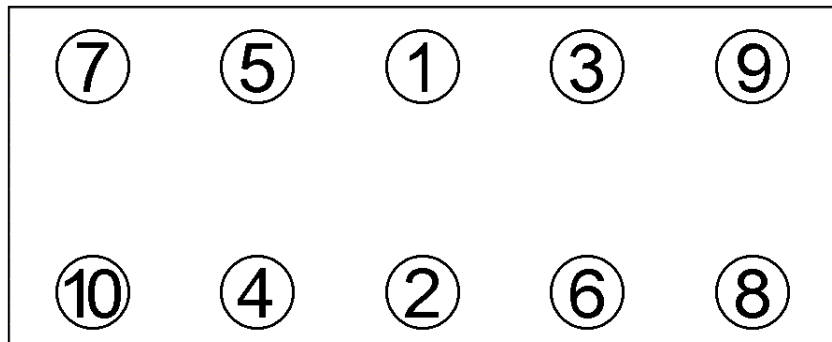


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****495.790**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo802.760  
M 10x1,5x95Anziehen/  
Tightening/  
Serrage/  
Apriete
 30 Nm  
 90°  
 90°
**Zeichenerklärung / Explanations / Explication / Explicacion**

|   |   |                              |                                |                                       |
|---|---|------------------------------|--------------------------------|---------------------------------------|
|   | neue Zylinderkopf-schrauben verwenden       | use new cylinder head bolts  | utiliser des vis neuves        | emplar tornillos nuevos               |
| * | Warmlauf (80°C)                             | warm up time (80°C)          | chauffage (80°C)               | calentamiento (80°C)                  |
|   | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit                                    | relaxation time              | durée de tassement             | tiempo de espera                      |
| ➤ | Drehwinkel                                  | torque angle                 | angle de serrage               | ángulo de giro                        |

**Motortyp / Engine type / Type de moteur / Tipo de motor**

1,74 mm ÷

Mot. M 44

1,9 Ltr. 16 V, 103 kW (140 PS)

Z3 E36 11/1995&gt;

318 is E 36 01/1996&gt;

318 ti E 36

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/01/22

**\*495.790\***