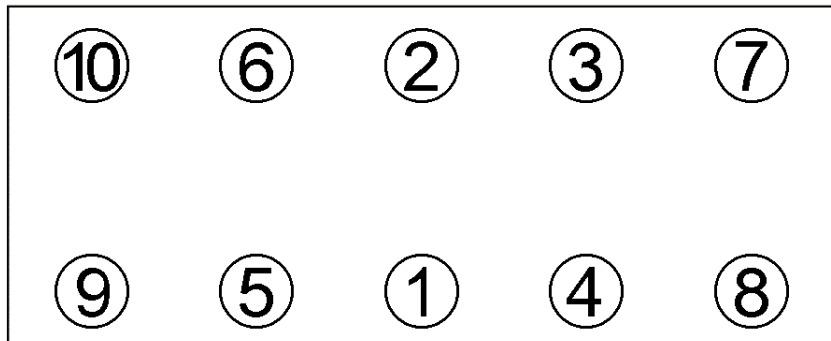


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****076.892**passend für / suitable for
adaptable à / adaptable a**Alfa Romeo / Fiat / Opel****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo803.060
M 10 x 153

Anziehen/ Tightening/ Serrage/ Apriete	25 Nm 90° 90° 90° 45°
---	-----------------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 0,65 mm, Ø 81,7 mm

Mot.: A18XER, Z18XER, Z16LET/XER, A16LER/XER,
Z16LEL, A16LEL, Z16LER, 939 A4.000

1,6 ltr.-1,8 ltr. 103-132 KW (140-192 PS)

Astra H/J, Corsa D, Insignia, Meriva A
Vectra C, Zafira B, Alfa 159, Fiat Croma**Elring-Serviceteam**Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/11/05

076.892