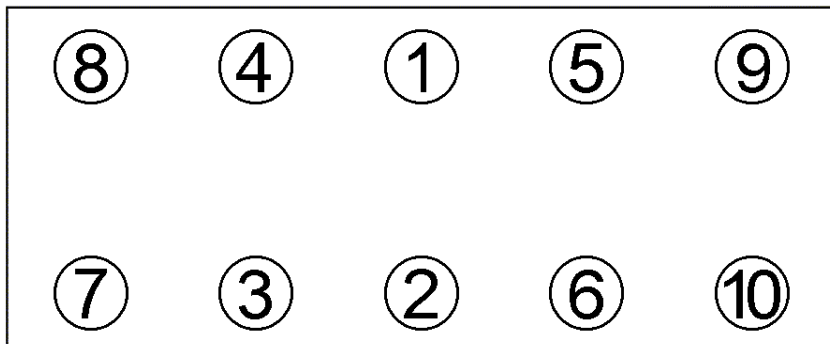
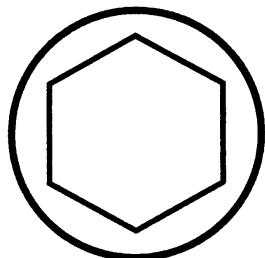


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****158.382**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

Anziehen/	⊙ 25 Nm
Tightening/	50 Nm
Serrage/	➤ 90°
Apriete	➤ 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor1,7 Ltr. Diesel 1,00 mm / 2 Löcher
Mot. Z17DT, A17DT, Z17DTR, A17DTR,
A17DTC, A17DTS, A17DTJAstra H, Astra J, Corsa D, Meriva A,
Meriva B, Zafira B**Elring-Serviceteam**
Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/01/22

158.382