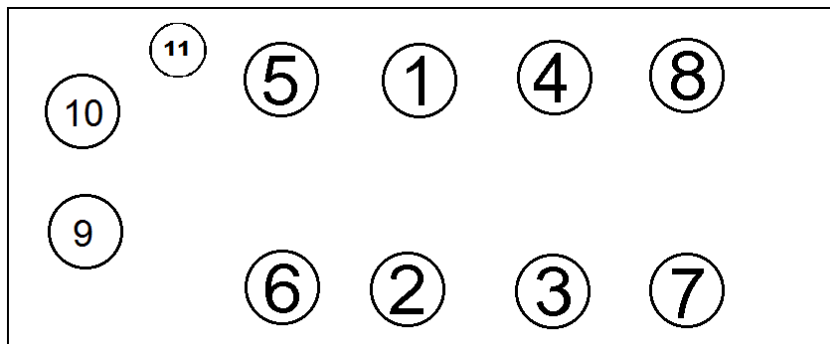


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****589.490**passend für / suitable for  
adaptable à / adaptable a**Toyota / PSA****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo728.090  
M 9x1,5x120Anziehen/  
Tightening/  
Serrage/  
Apriete

- ⊙ 1-11: 10 Nm
- ⊙ 1-10: 30 Nm
- ⊙ 11: 20 Nm
- > 1-8: 230°
- > 9-10: 180°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

1,0 Ltr. VVT-i

Mot. 1KR-FE

05.2014 &gt;

Aygo 05/2014 -&gt;

Yaris 07/2014 -&gt;

Peugeot 108, Citroen C1

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*589.490\***