

Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****774.847**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

802.720

M 12x1,75x157

Anziehen/
Tightening/
Serrage/
Apriete

- ⊙ 58 - 62 Nm
- 15 min
- 30° - 36°
- * 25 min
- 20° - 30°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. M10/M20 B18/B20 ±1,5mm

1800, 2000, 2000C,CS,ti,tii,tilux

1802, 2002, 2002tii, 2002ti,tii, 2002turbo

E21 316, 318, 318i, 320, 320i

E30 316, 316i, 318i

E12 518, 518i, 520, 520i

E28 518, 518i

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/10/10

774.847