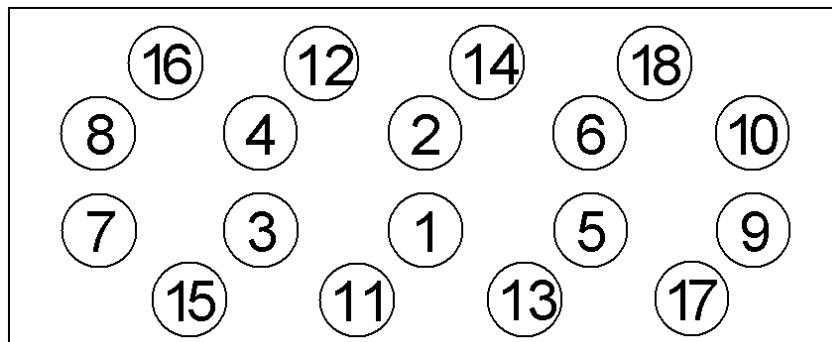


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****265.371**passend für / suitable for  
adaptable à / adaptable a**Ford****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

175.580

M 10x159,5/M8x121

Anziehen/  
Tightening/  
Serrage/  
Apriete

- Pos. 1-10: 10 Nm
- Pos. 11-18 5 Nm
- Pos. 1-10 20 Nm
- Pos. 11-18: 10 Nm
- Pos. 1-10: 40 Nm
- Pos. 11-18: 20 Nm
- Pos. 1-18: 180°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 87,1 mm; ÷: 1,10 mm 1 Zähne/teeth/dents

Mot: ABFA;D3FA;D5BA;F3FA;F1F5AFMBA;HJBA

HJBB;HJBC;N7BA;QJBA;QJBC;QJBD;SDBA

2,0 ltr.Duratorq 55-96 KW (75-130 PS)

Mondeo (TDDi) 10/00&gt;; Mondeo (TDCi) 10/01&gt;

Transit(Di) 08/00&gt;; Transit (TDCi) 05/02&gt;

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/09/05

**\*265.371\***