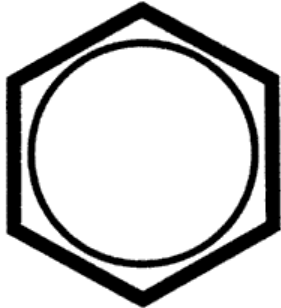
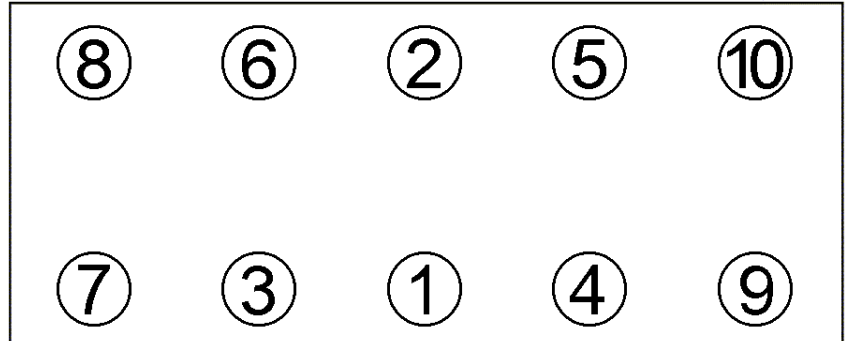


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****144.420**passend für / suitable for
adaptable à / adaptable a**Fiat****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo760.720
M 9x1,25x96

Anziehen/ Tightening/ Serrage/ Apriete	100.GL.000 020.AA.090 50 Nm	100.GL.3000 146.A.000 100.GL 30 Nm 59 Nm 1.000 km 59 Nm
---	-----------------------------------	---

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,74/1,65 mm, Ø 66 mm

Mot.: 100 G.000, 100 GL3.000, 146 A.000

0,9 Ltr.

Fiat 127, 850, Fiorino, Panda, Uno

Seat Ibiza, Marbella, Terra

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/05

144.420