

Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****146.818**passend für / suitable for
adaptable à / adaptable a**Opel****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo804.910
M 12x1,5x235

- Anziehen/ Tightening/
Serrage/ Apriete
- ⊙ 25 Nm
 - > 65°
 - > 65°
 - > 65°
 - > 65°
 - > 15°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,3 mm, Ø 85,5 mm, 1 Loch/hole/trou/agujero

Mot.: X 20 DTH/DTL, Y 20 DTH/DTL, X 22 TH,

Y 22 DTH/DTR

Astra, Frontera, Omega, Signum, Vectra, Zafira

Saab 9-3, 9-5

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/05

146.818