

Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****563.147**passend für / suitable for
adaptable à / adaptable a**PSA/Fiat****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo758.280
M 11x1,5x175Anziehen/
Tightening/
Serrage/
Apriete
 60 Nm
 20 Nm + 300°
Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 84,5 mm; ÷: 1,27 mm

Mot: XU9S, XU5S, XU5J, XU51C, XU5CP, BAY, BAZ

BDY, XU5M, XU5JP, BFZ, XU9J2, XU9M, LFW,

XU7JP, XU7JB, LFX, LFX

Berlingo, BX, Visa, Xantia, Xsara, ZX, Ulysse, 205,

305, 306, 309, 405, 406, 806, Expert, Partner

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

563.147