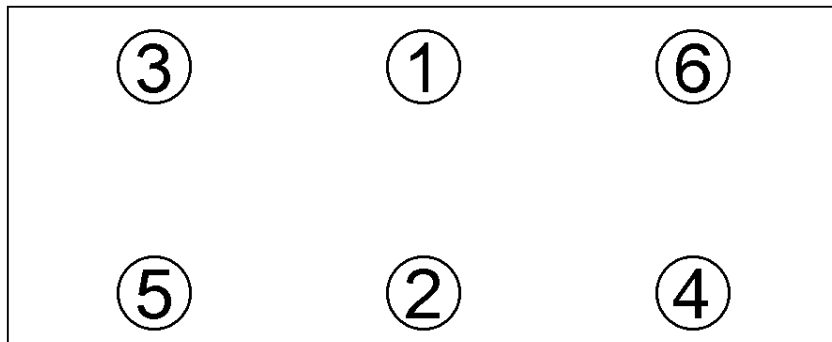


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****650.230**passend für / suitable for  
adaptable à / adaptable a**Subaru****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornilloAnziehen/  
Tightening/  
Serrage/  
Apriete

-&gt; MY 2009

29 Nm

69 Nm

➤ lösen 180°

➤ lösen 180°

49 Nm

➤ 80° - 90°

➤ 40° - 45°

➤ only bolt 1&amp;2: 45°

MY 2010 -&gt;

Step 1-5:

40 Nm

95 Nm

➤ lösen 180°

➤ lösen 180°

10 Nm

MY 2010 -&gt;

Step 5-10:

30 Nm

70 Nm

➤ 80° - 90°

➤ 40° - 45°

➤ only bolt 1&amp;2: 45°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 101mm; ÷: 0,8mm

Mot: EJ251; EJ253

2.5ltr. 16V Boxer

1999&gt;

Baja, Exiga, Forester, Impreza, Legacy,  
Liberty, Outback**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/01/22

**\*650.230\***