


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****917.908**passend für / suitable for
adaptable à / adaptable a**Volkswagen****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

104.510

M 11x85/119/144

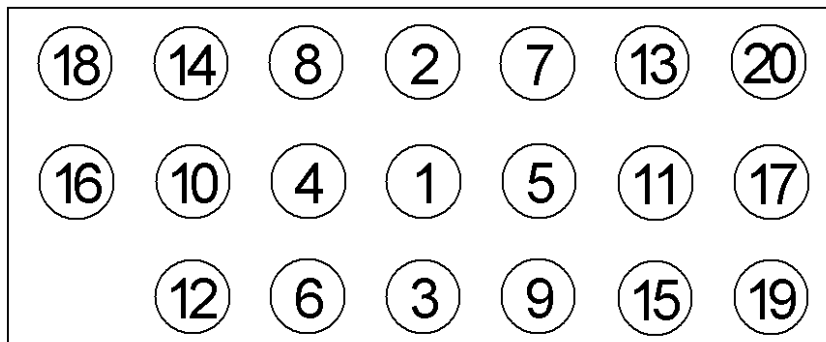

Anziehen/ Tightening/ Serrage/ Apriete	40 Nm 60 Nm 90° 90°
---	------------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. 2,8 Ltr. VR6 / 2,9 Ltr. VR6

T4 Transporter 1/1996>

Golf, Vento 1/1992> Passat 10/1993>

Sharan, Ford Galaxy 9/1995>

Golf Syncro 11/1994> Passat Syncro 10/1994>

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/10/09

917.908