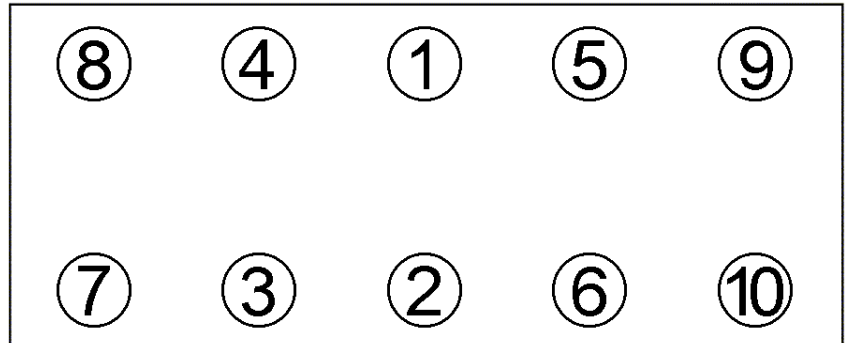


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****075.860**passend für / suitable for
adaptable à / adaptable a**Citroën, Peugeot****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo267.550
M12x1,5x126Anziehen/
Tightening/
Serrage/
Apriete
 20 Nm
 60 Nm
 220°
Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,5 mm, Ø 86 mm, 5 Kerben/notches/encoches/muescas

Mot.: DW10 TD/UTD/ATED/BTED, RHS, RHV, RHX, RHZ

2,0 Ltr. HDi Diesel

Berlingo, C5, Evasion, Jumper, Jumpy, Xantia, Xsara, Ducato,
Scudo, Ulysse, Zeta, 206, 306, 307, 406, 407, 607, 806, Boxer,
Expert, Partner, Grand Vitara**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

075.860