


**Anziehvorschrift**  
**Tightening Instruction**  
**Instructions de serrage**  
**Prescripciones de apriete**  
**安装说明**

**728.180**

Das Original



**Reihenfolge / Commander / Sucesión / 安装顺序**

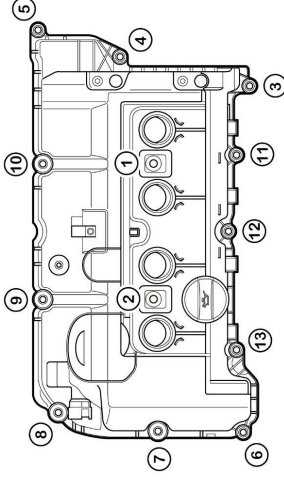


Step 标准步骤	Wert/Figure/Value/扭矩																										
1.	<table border="1"> <thead> <tr> <th>metrisch/metric/métrico/ 毫米</th> <th>US Standard</th> </tr> </thead> <tbody> <tr> <td>Pos. 1-13 (M6x30) : 10 Nm</td> <td>7,38 ft.-lb</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table>	metrisch/metric/métrico/ 毫米	US Standard	Pos. 1-13 (M6x30) : 10 Nm	7,38 ft.-lb																						
metrisch/metric/métrico/ 毫米	US Standard																										
Pos. 1-13 (M6x30) : 10 Nm	7,38 ft.-lb																										

© Elring - Das Original 05/2020 Voo03787

**Motortyp / Engine type / Type de moteur / Tipo de motor / 发动机型号**

MINI / Citroën / DS / Peugeot  
 1.4 -1.6L / N12 B14 A, N12 B16 A, N16 B16 A, EP3, EP6  
 Clubman (R55), Cooper (R56), Cabriolet (R57), Countryman (R60)  
 2008, 207, 208, 3008, 308, 508, Berlingo, C3, C4, C5, DS3, DS4, Partner


**ElringKlinger AG**  
 Max-Eyth-Straße 2 | D-72581 Dettingen/Erms  
 Fon +49 7123 724-799 | Fax +49 7123 724-798  
 elring@elring.de | www.elring.com

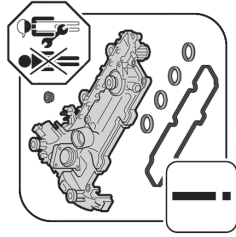


1.




2.

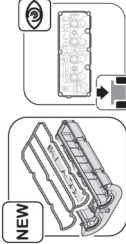


3.

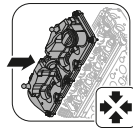

4.

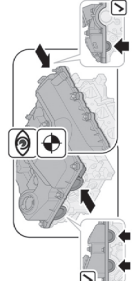

5.

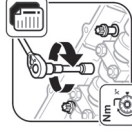

**ElringKlinger AG**

Max-Eyth-Straße 2 | D-72581 Dettingen/Erms  
 Fon +49 7123 724-799 | Fax +49 7123 724-798  
 elring@elring.de | www.elring.com



Das Original

© Elring - Das Original 05/2020