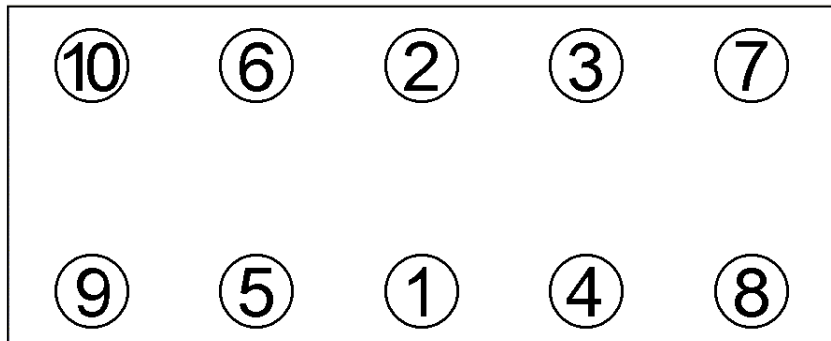


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****807.801**passend für / suitable for
adaptable à / adaptable a**Opel****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo257.910
M11x1,5x162Anziehen/ 30 Nm
Tightening/ 75°
Serrage/ 75°
Apriete 15°**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 87,3 mm; ÷: 0,5 mm

Mot: Z 22SE (2,2 Ltr.)

Astra, Zafira 1998 >
Vectra B 1996 > 2001
Vectra C 2002 >
Speedster 2001 >**Elring-Serviceteam**
Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/01/22

807.801