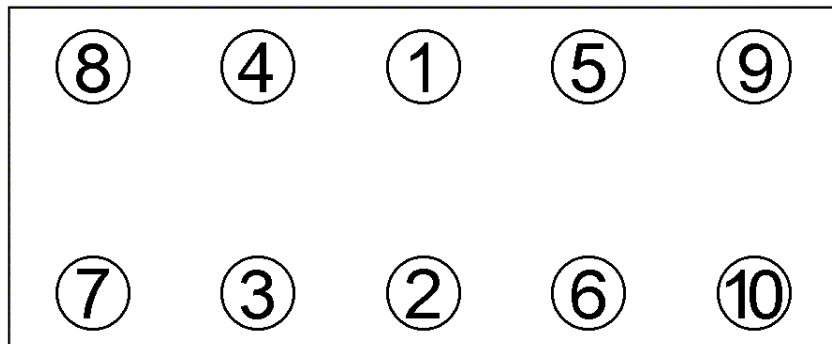


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****987.043**passend für / suitable for  
adaptable à / adaptable a**Renault****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

759.371

M10x107,5x1,5

+M10x93x1,5

Anziehen/  
Tightening/  
Serrage/  
Apriete

20 Nm

100° ± 6°

3 min

Pos. 1 und 2:

20 Nm + 100°±6°

Pos. 3-6:

20 Nm + 100°±6°

Pos. 7-10:

20 Nm + 100°±6°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 77 mm, ÷: 1,43 mm

Mot: E5F 710,716, E6J 700,701,706,712,

713,718,760, E7F 700,706, E7J 624

626,634,635,706,718,719,720,724,

726,728,742,745,754,780

R19,Clio,Kangoo,Megane,Rapid

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/10/09

**\*987.043\***