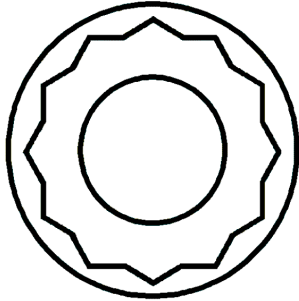
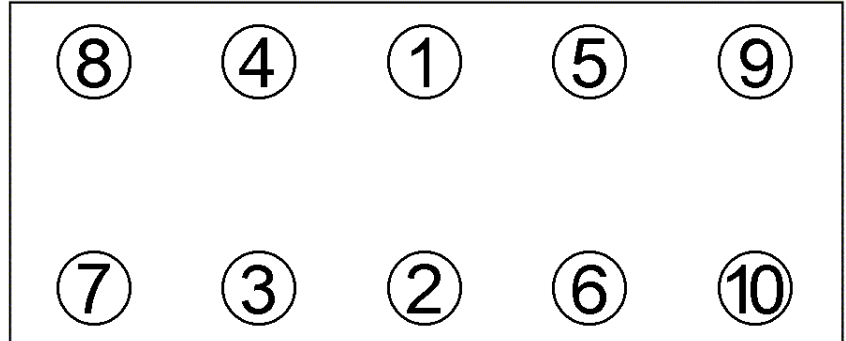


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****442.850**passend für / suitable for  
adaptable à / adaptable a**Hyundai****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo912.370  
M12x184x1,5Anziehen/  
Tightening/  
Serrage/  
AprieteModels until 2003  
● 50 Nm  
➤ 120°  
➤ 90°Models from 2004  
● 25 Nm  
● 50 Nm  
➤ 120°  
➤ 120°

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 84,5 mm; ÷: 1,10 mm

MC: D4EA, D4EA-F, D4EA-V

2,0 ltr. CRDi

83-103 kW (113-140 PS)

Elantra, i30, Santa Fé, Sonata V, Trajet, Tucson  
Carens II+III, Cerato, Magentis, Sportage, Cee'd**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*442.850\***