


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****917.908**passend für / suitable for  
adaptable à / adaptable a**Volkswagen****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

104.510

M 1x85/119/144

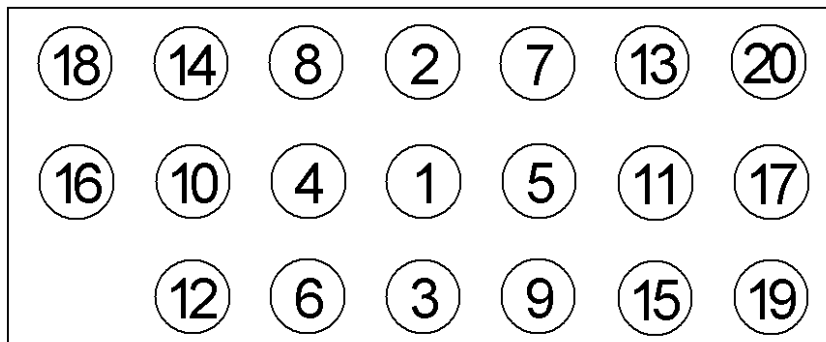

Anziehen/ Tightening/ Serrage/ Apriete	40 Nm 60 Nm 90° 90°
---	------------------------------

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mot. 2,8 Ltr. VR6 / 2,9 Ltr. VR6

T4 Transporter 1/1996&gt;

Golf, Vento 1/1992&gt; Passat 10/1993&gt;

Sharan, Ford Galaxy 9/1995&gt;

Golf Syncro 11/1994&gt; Passat Syncro 10/1994&gt;

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*917.908\***