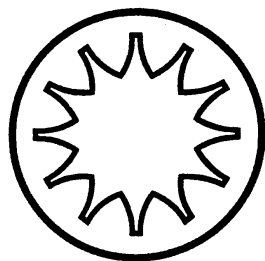
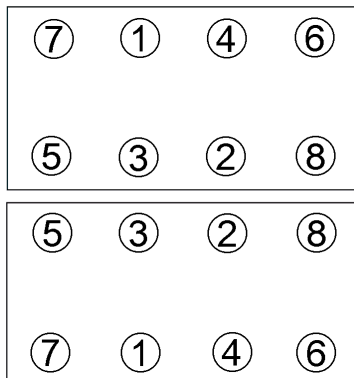


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****735.470**passend für / suitable for
adaptable à / adaptable a**VW / Audi****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo130.110
M 12x1,5x159

Anziehen/ 35 Nm
 Tightening/ 60 Nm
 Serrage/ > 90°
 Apriete > 90°

Zeichenerklärung / Explanations / Explication / Explicacion

| | | | | |
|---|---|------------------------------|--------------------------------|---------------------------------------|
| | neue Zylinderkopfschrauben verwenden | use new cylinder head bolts | utiliser des vis neuves | emplar tornillos nuevos |
| * | Warmlauf (80°C) | warm up time (80°C) | chauffage (80°C) | calentamiento (80°C) |
| | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit | relaxation time | durée de tassement | tiempo de espera |
| > | Drehwinkel | torque angle | angle de serrage | ángulo de giro |

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 84 mm ÷ 1,1 mm Cyl. 4-6

Mot. CAMA, CAMB, CANA, CANB, CANC, CAND, CARA, CASA,
CASB, CASC, CASD, CATA, CCLA, CCMA, CCWA, CCWB,
CDYA, CDYB, CDYB, CDYC, CEXA, CGKA, CGKB

A4, A5, A6, A8, Q5, Q7

Phaeton, Touareg

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/10/10

735.470