

Assembly instructions for water pumps

Einbauhinweise für Wasserpumpen
Instrucciones de montaje para bombas de agua
Instructions de montage pour pompes à eau
Инструкция по установке водяных насосов
Istruzioni di montaggio per pompe acqua

MEYLE no. 713 220 0007 | 713 220 0019

Short no. MWPD497 | MWPD557

To fit/Passend für/Aptos para/Convient pour/для/Adatti per

FORD | JAGUAR



**Installation by qualified personnel only.
Car manufacturer's instructions to be
observed closely.**

Einbau nur durch geschulte Fachkräfte. Hinweise der Fahrzeughersteller genau befolgen.


El montaje sólo debe realizarse por un técnico instruido. Siga exactamente las indicaciones del fabricante del vehículo.

Installation uniquement par main-d'oeuvre spécialisée. Suivre les indications du fabricant d'automobile pour l'installation.

Монтаж должны производить только обученные специалисты. Следует точно соблюдать инструкции завода-изготовителя автомобиля.

Montaggio solo da parte di meccanici specializzati. Sono da seguire esattamente le istruzioni fornite dal costruttore del veicolo.

1

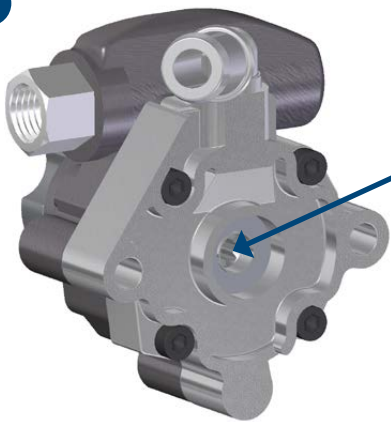


✓ X



2



3

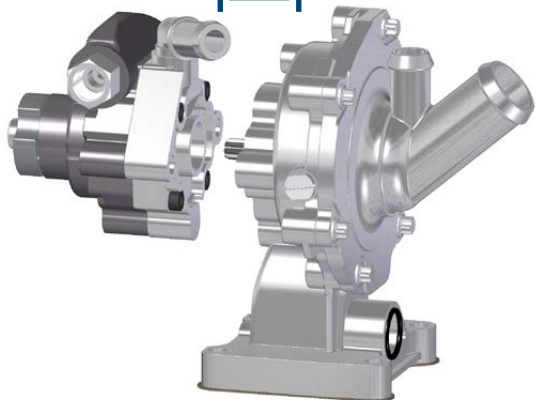

4

