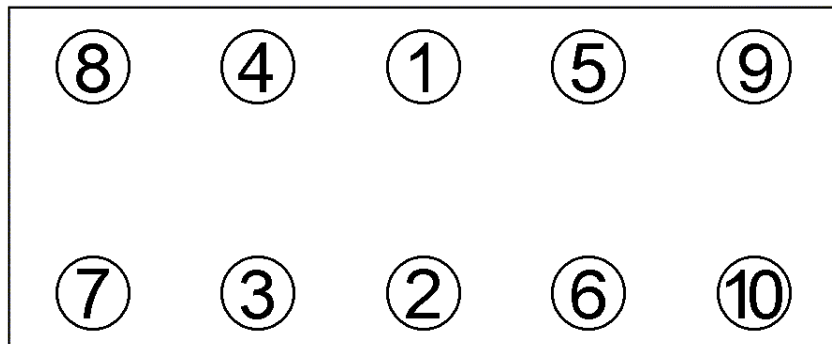


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****118.051**passend für / suitable for
adaptable à / adaptable a**Renault****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

759.371

M 10x93/107,5x1,5

Anziehen/
Tightening/
Serrage/
Apriete

- 1.
- 20 Nm
 - $100^\circ \pm 6^\circ$
 - 3 min
- Pos. 1-2:
- 20 Nm + $100^\circ \pm 6^\circ$
- Pos. 3-6:
- 20 Nm + $100^\circ \pm 6^\circ$

- 2.
- Pos. 7-10:
- 20 Nm + $100^\circ \pm 6^\circ$

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,75 mm, Ø 77 mm

Mot.: E5F 710,716, E6J 700,701,706,712,
713,718,760, E7F 700,706, E7J 624,
626,634,635,706,718,719,720,724,
726,728,742,745,754

R19, Clio, Kangoo, Megane, Rapid

Elring-ServiceteamFon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/11/05

118.051