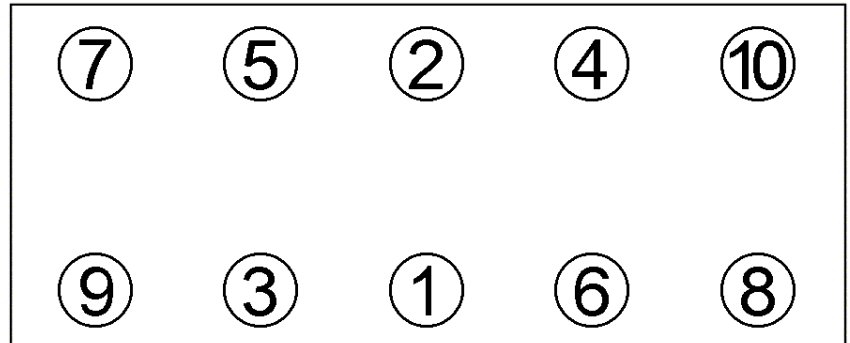
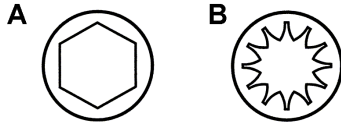


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****286.623**passend für / suitable for  
adaptable à / adaptable a**Mitsubishi****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo709.170  
M 10x1,25x100Anziehen/  
Tightening/  
Serrage/  
AprieteA  
● 30 - 35 Nm  
● 50 - 55 Nm  
● 70 - 75 NmB  
● 49 Nm  
□ 20 Nm  
➤ 90°  
➤ 90°

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mot: 4G12, 4G15

1,4-1,5 ltr

50-77 kW (68-105 PS)

Colt, Lancer, Mirage, Tredia 1978-1984

Colt, Lancer, Mirage 1984-

Lantra I, Pony X-2, S Coupe SLC 1985-1996

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/10/10

**\*286.623\***