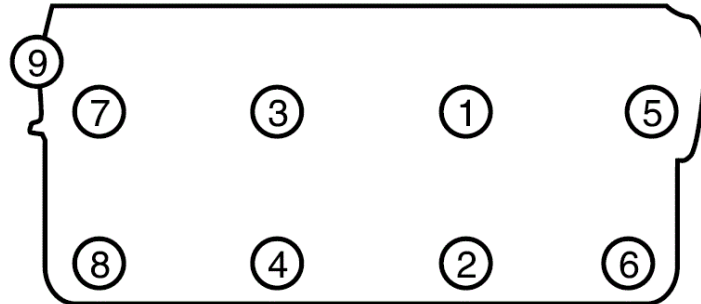


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****651.810**passend für / suitable for
adaptable à / adaptable a**Chrysler/Dodge/VW****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornilloAnziehen/
Tightening/
Serrage/
Apriete

1-8 45 lb-ft
 1-8 65 lb-ft
 1-8 65 lb-ft
 1-8 90°

9 25 lb-ft in three steps

1-8 60 Nm
 1-8 88 Nm
 1-8 88 Nm
 1-8 90°

9 34 Nm in three steps

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

2001-2010 3.8L V6 3778ccm/231cid LH

Chrysler Town & Country 2001-2010

Dodge Grand Caravan 2001-2010

Volkswagen Routan 2009-2010

Chrysler Pacifica 2005-2008

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

651.810