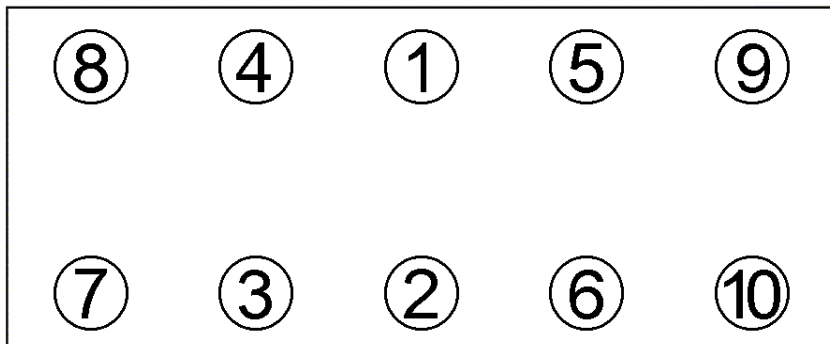


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****076.358**passend für / suitable for  
adaptable à / adaptable a**Fiat / Lancia / Opel****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

Anziehen/	⊙ 40 Nm
Tightening/	> 90°
Serrage/	> 90°
Apriete	

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

÷ 0,82 mm, Ø 70,6 mm, 1 Loch/hole/trou/agujero/fo

Mot.: 188A9.000, Y13DT, Z13DT, Z13DTJ, Z13DTH

1,3 ltr. Diesel JTD

500, Doblo, Nuova Panda, Idea, Doblo, Palio, Punt  
Ypsilon, Musa

Astra, Agila, Combo, Corsa, Meriva

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/11/05

**\*076.358\***