



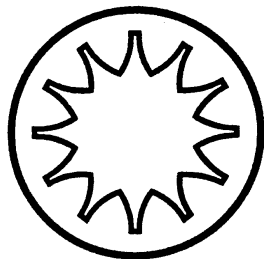

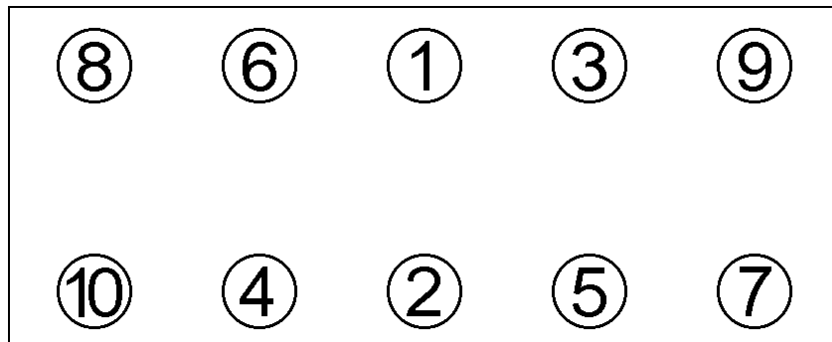


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****141.990**passend für / suitable for
adaptable à / adaptable a**Toyota****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

022.820

M 11 x 1,5 x 161

Anziehen/
Tightening/
Serrage/
Apriete
 40 Nm
 79 Nm
 > 90°
Zeichenerklärung / Explanations / Explication / Explicacion

| | | | | |
|--|---|------------------------------|--------------------------------|---------------------------------------|
|  | neue Zylinderkopf-schrauben verwenden | use new cylinder head bolts | utiliser des vis neuves | emplar tornillos nuevos |
| * | Warmlauf (80°C) | warm up time (80°C) | chauffage (80°C) | calentamiento (80°C) |
|  | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit | relaxation time | durée de tassement | tiempo de espera |
| > | Drehwinkel | torque angle | angle de serrage | ángulo de giro |

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 0,55 mm, Ø 88 mm

Mot.: 1AZ-FSE, 1AZ-FE

2,0 Ltr. VVT-i 16V

Avensis, Camry, RAV4

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/05

141.990