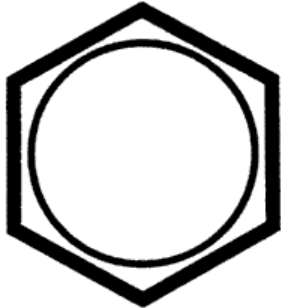
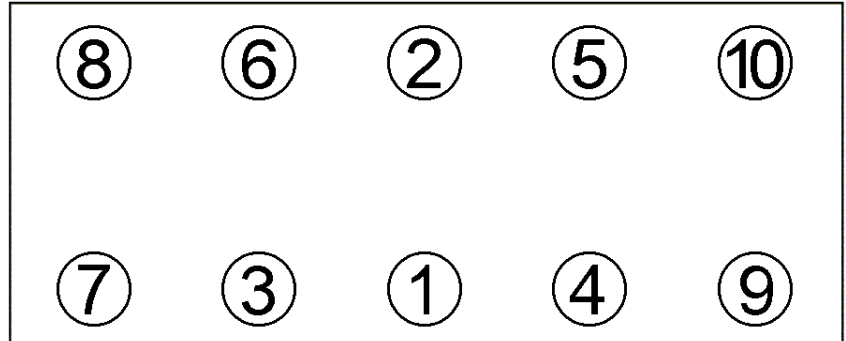


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****180.180**passend für / suitable for
adaptable à / adaptable a**Fiat****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo760.720
M 9 x 96

Anziehen/ Tightening/ Serrage/ Apriete	156C.046 176A6.000 176B2.000 (Punto)	160A3.000 176B2.000 156C.046(Y10 89-95)
	☀ 20 Nm 30 Nm > 90° > 90°	☀ 30 Nm > 90° > 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,95 mm, Ø 71 mm

Panda, Punto 1,1 Ltr. ab 1991>

Cinquecento 1,1 Ltr. ab 1994>1998

Seicento 1,1 Ltr. ab 1998>2000

Mot. 176B2.000, 156C.046, 176A6.000,

Tipo, Uno, Y10 1,1 Ltr. ab 1988>

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

180.180