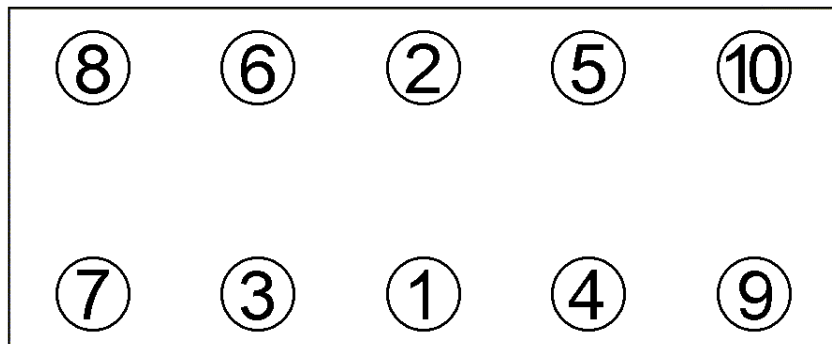
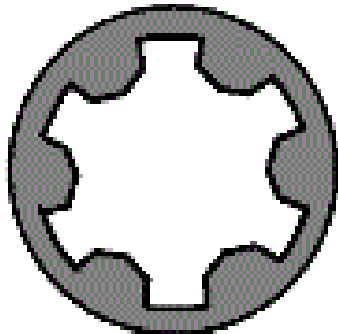


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****180.270**passend für / suitable for  
adaptable à / adaptable a**Fiat****Das Original**Schraubenkopf / Head shape    Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

Anziehen/ Tightening/ Serrage/ Apriete	15 Nm 30 Nm 90° 90°
---	------------------------------

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

÷ 1,65 mm, Ø 71,4 mm

Fiat Punto 1,2 i.e., Lancia Y 1,2    ab 1997&gt;

Fiat Brava/o 1,2, Fiat Marea 1,2    ab 1998&gt;

Fiat Stilo 1,2    ab 2001&gt;

Mot. 188A5.000 (&gt; Mot. 616936), 176B9.000,

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/11/05

**\*180.270\***